

## CYBERNET CHASSIS

CH9 to CH19 for mobiles, disconnect track from LC7137 pin 9 and reconnect to pin 8. Add 2 off 1N4148 diodes with cathodes (bar) connected to common ends of D1 and 4 and anode ends to c' and b' segments on CH display as shown (switch side NOT display side). Where the anode of the diodes have been connected to the resistor array, fit diodes as shown and cut the track between the connections.

On rigs without a CH9 switch, use a changeover switch to disconnect power from CH switch and CH display and to connect power (up to 8v) to pin 8 and to the diodes added to produce "19" on CH display.

TRACK SIDE VIEW:

